


# Quick Start Guide

**D-BOX**  
HaptiSync Hub

## Each Haptic Seat Package Includes:



- 1x D-BOX Haptic Seat (at least)



- 1x Power Cord



- 1x IEC Plug-Lock Insert




- 3 or 4x Stabilization Cups (varies per model)



- 1x CAT.5E Shielded Cable


## HaptiSync Hub Package Includes:

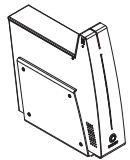

- 1x HaptiSync Hub



- 1x Antenna




- 1x Power Cord

Complete User Manual is accessible at:  
<https://www.d-box.com/en/downloads/>

## 1 Prepare your Haptic Seat


- Follow the manufacturer's instructions to assemble your Haptic Seat.
- Insert the IEC plug lock on the female end of the power cord and connect it.
- Install the stabilization cups underneath your Haptic Seat:

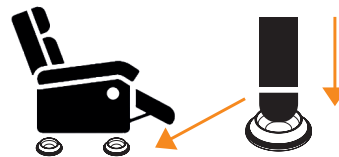


- Make sure nothing will be pinched or damaged while the Haptic Seat is moving.

## 2 Prepare your HaptiSync Hub


- Screw the antenna on the back of your HaptiSync Hub. Place the antenna upwards for optimal reception.

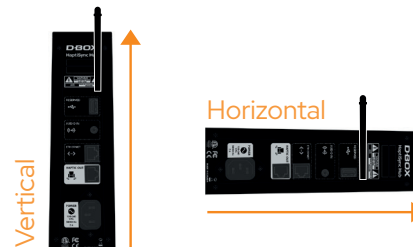

- Install your HaptiSync Hub on a flat surface with sound sensor toward your front speakers. Ensure it is located in an optimal location to maximize sound reception performance.

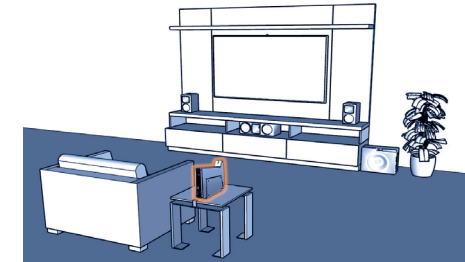

- Connect the HaptiSync Hub to the Haptic Seat using the CAT.5E shielded cable provided with the seat. **See other side of this page or the user manual for specific wiring diagrams.**
- Connect the power cable to your HaptiSync Hub

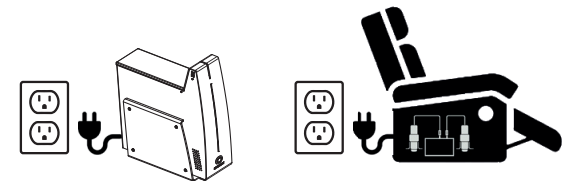


## 3 HaptiSync Configuration

- Go to the D-BOX Connect website:  
<https://connect.d-box.com>
- Create an account using a valid email address.
- Follow HaptiSync Configuration instructions on D-BOX Connect website.

# HAPTISYNC SYSTEM

## Wiring diagrams

### D-BOX LIFESTYLE & LIVING MODELS BY JAYMAR EXPERIENCE

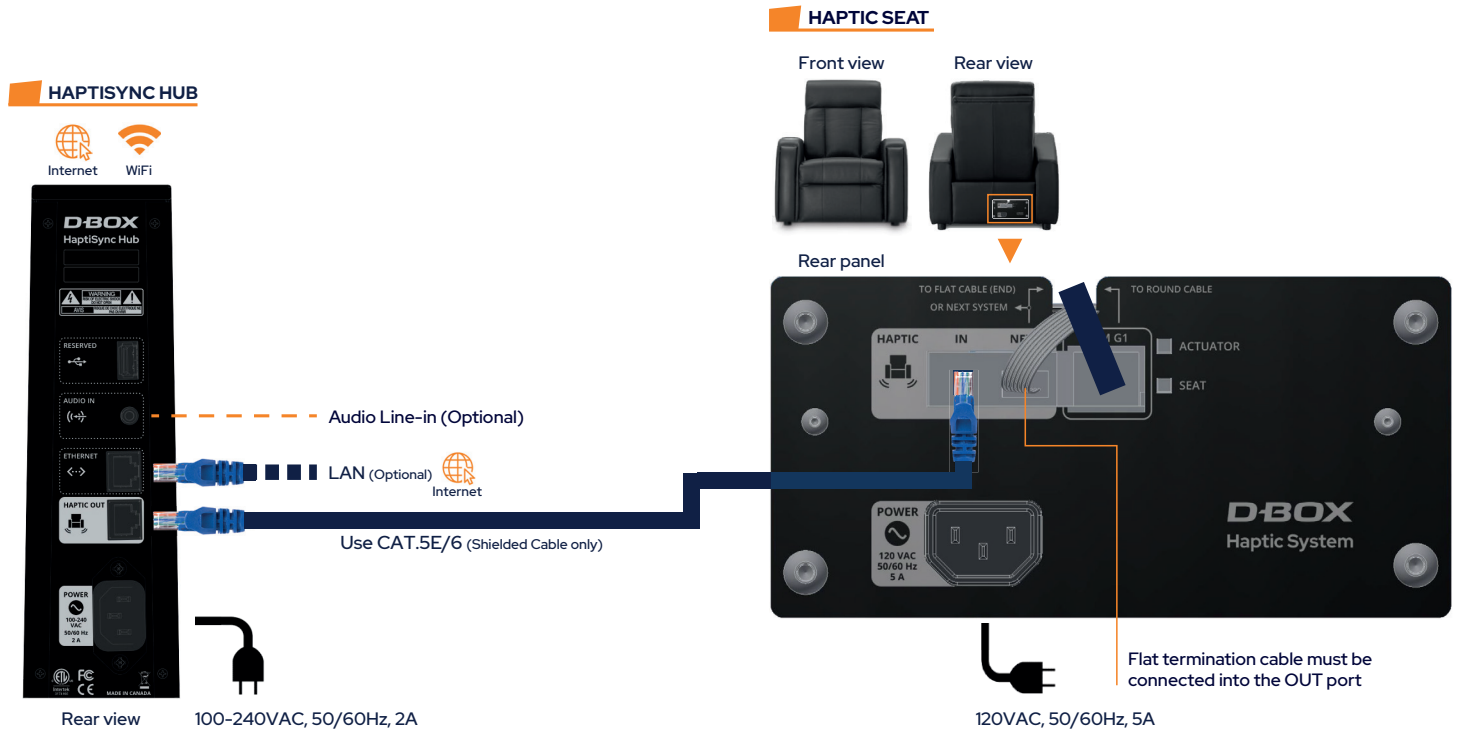

### OTHER CUSTOM HAPTIC SYSTEMS

